

## How to use English OCR function in ScanWizard 5


- A. After you complete to install scanner S/W : ScanWizard 5 into PC Windows system, and then you can find out the icon of “ **Microtek Scanner Configuration** “, “ **ScanWizard 5** “, and “ **My Images** “ will list you on the Desktop of PC Windows system as below illustration.



Double click the icon of “ **Microtek Scanner Configuration** “ from the Desktop of PC Windows system, by this way, you can get into the setting of “ **Microtek Scanner Configuration** “, define the setting of each button function, do image scanning with Microtek scanner by pressing button on control panel of scanner.




Double click the icon of “ **ScanWizard 5** “ from the Desktop of PC Windows system, and then you can get into stand-alone version of ScanWizard 5 and do image scanning with Microtek scanner.

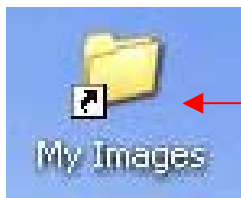


All of scanned images in ScanWizard 5 will be saved into folder : **My images**, its default path in PC Windows system located at “ **C:\Program Files \ Microtek \ ScanWizard 5 \ My Images** ”.

2. If you want to use OCR function, you can double click on the icon of ScanWizard 5 from desktop of PC Windows system, and then get into **Standard Control Panel** or **Advanced Control Panel** Mode of ScanWizard 5.

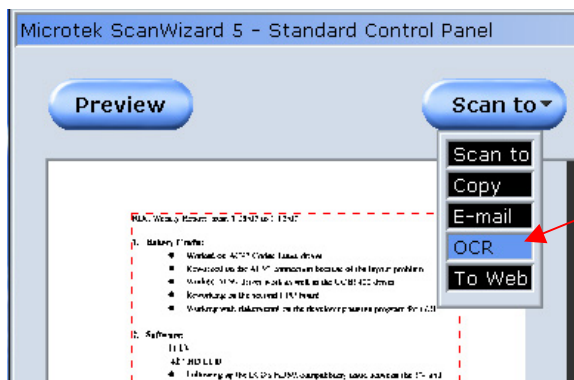

Here is Standard Control Panel of ScanWizard 5. You can move mouse to “ **Scan to** “, and then scroll the selection to “ **OCR** “, after that, there is a message will show you at step 3.

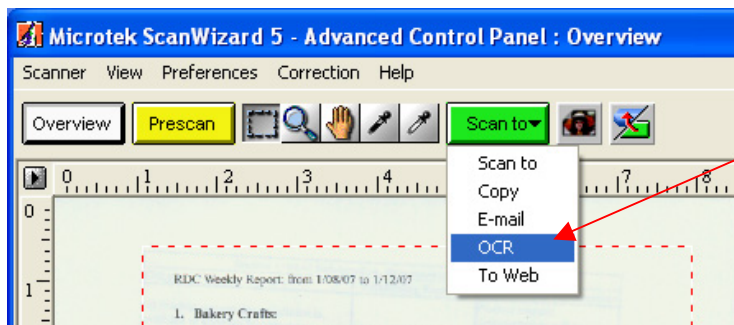

Here is Advanced Control Panel of ScanWizard 5. You can move mouse to “ **Scan to** “, and then scroll the selection to “ **OCR** “, after that, there is a message will show you at step 3.

**Notice :** If you can not find out the selection of **OCR** in the scroll list of “ **Scan to** “, this means your ScanWizard 5 did not include OCR Engine : ABBYY FineReader OCR V4.00 in it. By this way, you shall link to Microtek website in Europe at <http://ww3.microtek.com.tw/eu/modules/tinyd0/index.php?id=2> ( select OS : **WinXP**, next, select Product : **ScanMaker xxxx**, after that, click “ **GO!** ”. ), and then download optional files : **ABBYY FineReader OCR V4.00** there, after that, install English OCR Engine : **ABBYY FineReader OCR V4.00** into your PC Windows system.

3. Do the setting of “ **OCR** “ as below illustration. After that, click “ **Save** “ to start OCR function in ScanWizard 5.

Select to give a file name : **Document** and save it into folder : **C:\Program Files \ ScanWizard 5 \ My Images \ OCR.**

RTF format is for Microsoft word format.

Select OCR Language.

Open the file with AP : **Microsoft Word** after scan jobs is completed.

If you want to make a one page scanning in ScanWizard 5, by this way, the selection of “ **Save multiple pages as a single file** “ can be disable.