



TeamViewer 9 Manual

Wake-on-LAN

Rev 9.0-11/2013



Table of content

1	Requirements	3
2	Set up windows	4
2.1	Configure the BIOS	4
2.2	Configure the network card	4
2.3	Configure Windows 8.....	5
3	Set up Mac OS X	6
3.1	Configure the network card	6
4	Configure TeamViewer	7
4.1	Assign the computer to your TeamViewer account.....	7
4.2	Wake-on-LAN via a TeamViewer ID in the network	8
4.3	Wake-on-LAN via a public address	9
5	Wake up the computer	10
6	Appendix	11
6.1	Configure the router	11
6.1.1	Set up port forwarding to the broadcast address of the local network	12
6.1.2	Set up port forwarding to a certain computer.....	12




1 Requirements

In order to successfully wake up a computer by Wake-on-LAN, its hardware must meet several requirements.

The following checklist ensures that the computer is suitable for Wake-on-LAN:

- The computer is connected to a power source.
- The computer's network card supports Wake-on-LAN.
- The computer has an Internet connection.
- The computer is connected to the Internet via a network cable.
- The computer is in one of the following power states
 - **Sleep**
Start > Sleep
 - **Hibernation**
Start > Hibernation
 - **Shut down (Soft off)**
Start > Shut down
not supported under Mac OS X

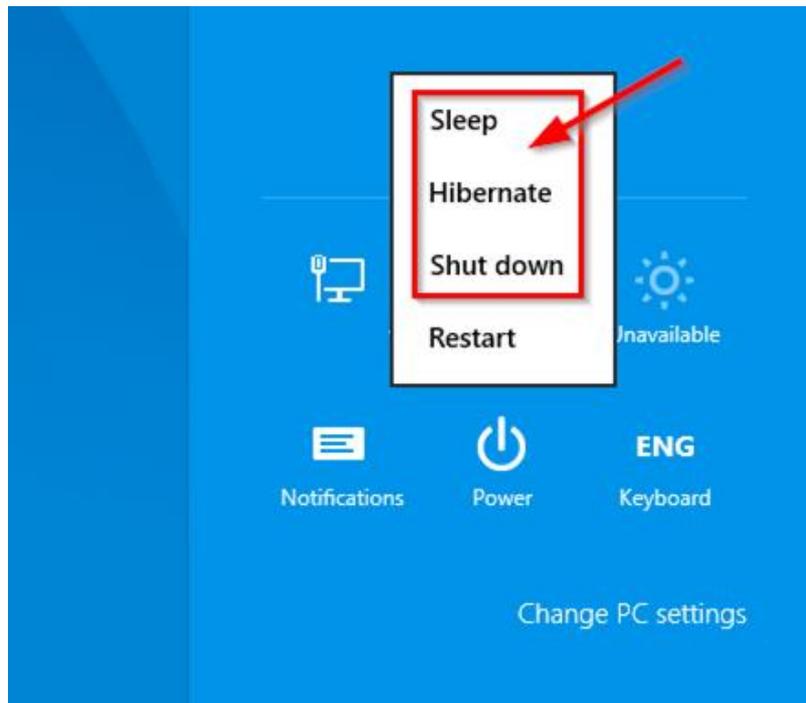

Supported power states.

If these requirements have been met, you can move on to configure your computer and the software in the next steps.



2 Set up windows


In order to wake up the computer, it must be appropriately set up. Several settings must be adjusted on the computer for this purpose and TeamViewer must be correctly configured.

2.1 Configure the BIOS

It may also be necessary to activate Wake-on-LAN in the computer BIOS. This procedure can differ from computer to computer.

To activate Wake-on-LAN in the BIOS, follow these steps:

1. Start the computer.
2. Press the F2 key (or the equivalent) to access the BIOS set-up.
→ The BIOS set-up will open.
3. Open the **Power** tab.
4. Activate the Wake-on-LAN option.
5. Save and exit the BIOS set-up.

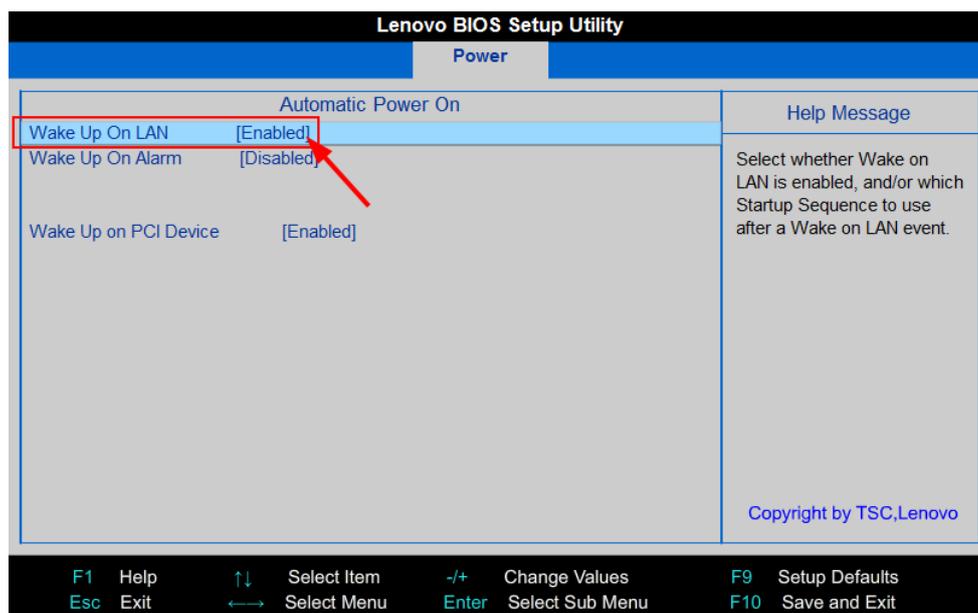

Activating Wake-on-LAN in the BIOS.

Note: If there is no option to activate Wake-on-LAN in the BIOS, check the manual of the motherboard to make sure that it supports Wake-on-LAN.

2.2 Configure the network card

The computer's network card must be configured in such a way that it is supplied with power at all times. It may be necessary to adjust the properties of the network card for this purpose.




Note: Administrative rights are required for this process.

Note: Configuration of the network card can vary depending on the type of network card and operating system version.

To activate Wake-on-LAN for the network card under Windows, follow these steps:

1. Start the computer.
2. Open the **Control Panel**.
3. Click **System and Security**.
4. Under **System**, click the **Device Manager** link.
→ The **Device Manager** window will open.
5. Under **Network adapters**, choose the **Properties** option in the context menu (right click) of the network card.
→ The **Properties of <network card>** dialog will open.
6. Open the **Power Management** tab.
7. Activate the **Allow this device to wake the computer** option.
8. The network card now supports Wake-on-LAN.

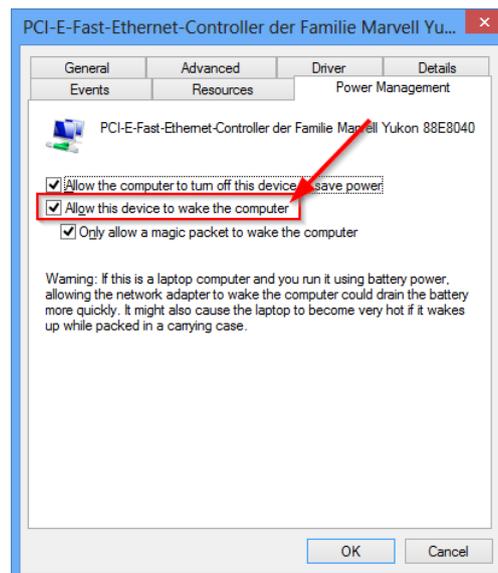

Activating Wake-on-LAN for the network card under Windows.

Note: If the option described in Step 7 is not activated, you must first activate the **Allow the computer to turn off the device to save power** option.

2.3 Configure Windows 8


Under Windows 8, the standard shutdown procedure puts the computer into a "hybrid shutdown" state. Because Windows 8 does not support Wake-on-LAN for this state, it is advisable to deactivate the fast startup. Once fast startup has been deactivated, the computer is always put into hibernation when shutdown.



Note: Administrative rights are required for this process.

To deactivate the fast startup under Windows 8, follow these steps:

1. Start the computer.
2. Open the **Control Panel**.
→ The **Control Panel** window will open.
3. Click **System and Security**.
4. Under **Power Options**, click the **Change what power buttons do** link.
5. Click on the **Change settings that are currently unavailable** link.
6. Uncheck the **Turn on fast startup (recommended)** box.
7. Fast startup is now deactivated.

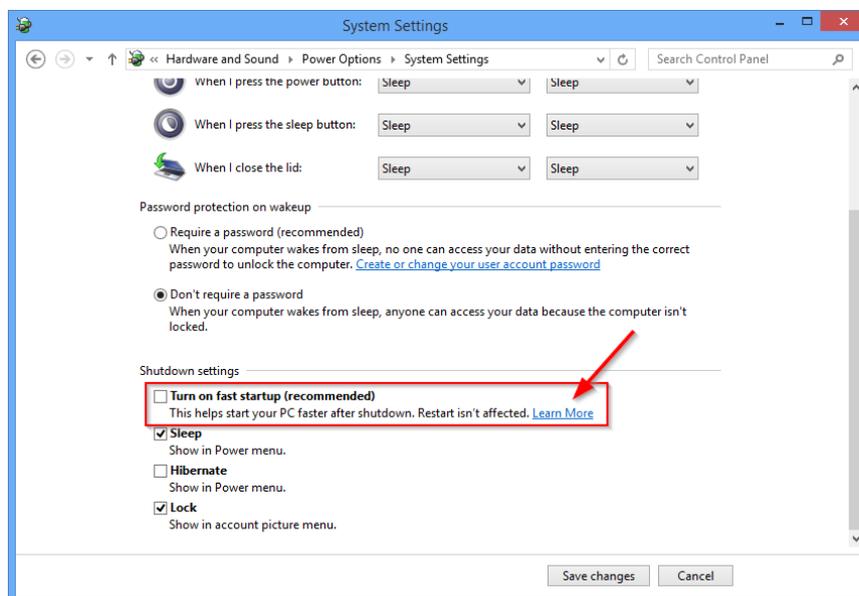

Deactivating fast startup under Windows 8.

3 Set up Mac OS X

The computer's network card must be configured in such a way that it is supplied with power at all times. It may be necessary to adjust the properties of the network card for this purpose.


3.1 Configure the network card

To activate **Wake-on-LAN** for the network card under Mac OS X, follow these steps:

1. Start the Mac.
2. Open the **System Settings**.



- The **System Settings** window will open.
3. Click **Save Energy**.
 4. Click the **Power Supply** tab.
 5. Activate the **Wake for Wi-Fi network access** option.
 6. The network card now supports Wake-on-LAN.

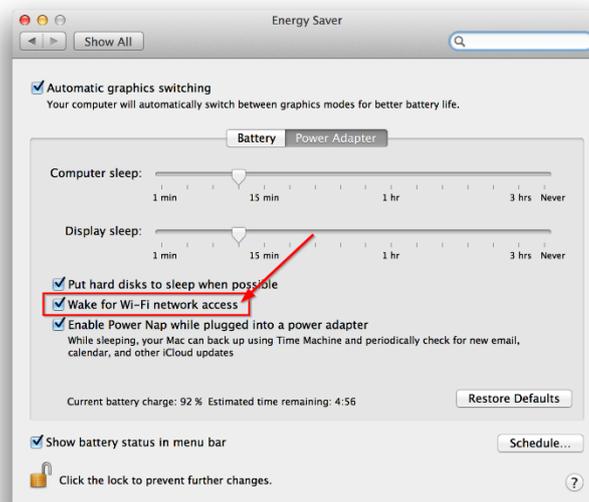

Activating Wake-on-LAN for the network card under Mac OS X.

4 Configure TeamViewer

In order to wake up a computer, TeamViewer must be configured once on this device. During this process, you can either configure TeamViewer so that the computer can be wakened **via its public address** or **via computers within the network**.

The following checklist ensures that TeamViewer is configured on the computer for Wake-on-LAN:

- TeamViewer must be installed.
- The computer must be assigned to your TeamViewer account.
- TeamViewer Wake-on-LAN must be activated.
- For Wake-on-LAN via the network, the TeamViewer ID of a computer via which the computer is to be wakened must be entered in the TeamViewer Wake-on-LAN options.
- For Wake-on-LAN via a public address, the public address of the computer must be entered in the TeamViewer Wake-on-LAN options.

4.1 Assign the computer to your TeamViewer account

In order to guarantee that the computer cannot be wakened by an unauthorized person, it must be ensured that the computer really belongs to you. You must therefore assign the computer to your




TeamViewer account. Only the TeamViewer account linked with the computer can wake it up.

Note: If the computer (that is to be wakened) is in a shared group, all TeamViewer accounts with which the group is shared can wake up this computer.

To assign the computer to your TeamViewer account, follow these steps:

1. Start TeamViewer on the computer.
2. Click **Extras | Options** in the main menu.
→ The **TeamViewer options** dialog box will open.
3. Select the **General** category.
4. Under **Account assignment**, click the **Assign to account...** button.
→ The **Assign to account** dialog will open.
5. Enter the e-mail address of your TeamViewer account in the **E-Mail** field.
6. Enter the password of your TeamViewer account in the **Password** field.
7. Click the **Assign** button.
8. You have now assigned the computer to your TeamViewer account.

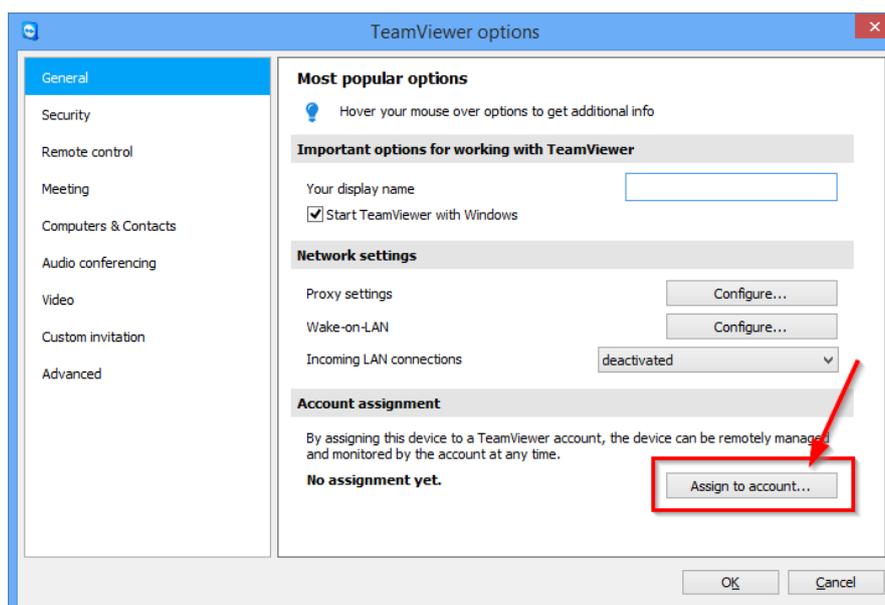

Assign the computer to your TeamViewer account

4.2 Wake-on-LAN via a TeamViewer ID in the network

If the computer does not have a public address, you can also wake it up using another computer in its network. The other computer must be turned on and TeamViewer must be installed and configured for starting with Windows.


If this is the case, you can activate Wake-on-LAN via the network in the TeamViewer options. Afterwards, enter the TeamViewer ID of the computer via which you intend to wake up the



computer. The signal to wake up is then sent from your computer to the computer that is to be wakened via the defined computer.

To activate TeamViewer Wake-on-LAN via a TeamViewer ID, follow these steps:

1. Start TeamViewer on the computer.
2. Click **Extras | Options** in the main menu.
→ The **TeamViewer options** dialog box will open.
3. Select the **General** category.
4. Under **Network settings | Wake-on-LAN**, click the **Configure...** button.
→ The **Wake-on-LAN** dialog is opened.
5. Click the **TeamViewer IDs within your network** option button.
6. In the **TeamViewer ID** field, enter the TeamViewer ID in your network via which the signal to wake up is to be sent and then click the **Add...** button.
7. Click the **OK** button.
8. The computer can now be wakened via the saved TeamViewer ID.

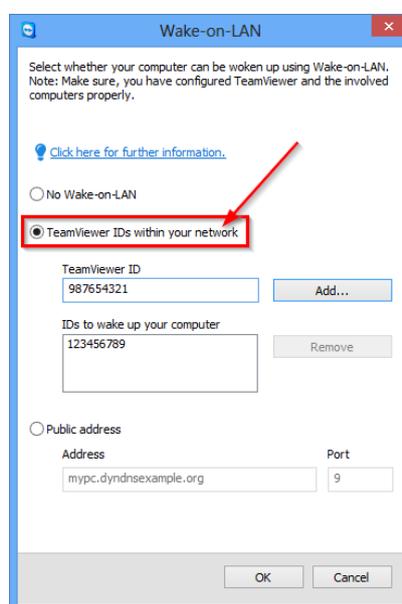

Activate Wake-on-LAN using TeamViewer IDs.

Note: In order to ensure that Wake-on-LAN is possible at all times, the computer via which the signal to wake up is to be sent must always be turned on and TeamViewer must be running.

4.3 Wake-on-LAN via a public address

If you want to wake up the computer with the help of its public address, your computer must be clearly identifiable on the Internet at all times.


This is the case either if you have a fixed, static IP through your Internet provider or your computer is reachable via a static domain address, e.g. with the help of a dynamic DNS provider (see



http://en.wikipedia.org/wiki/Dynamic_DNS). If these conditions are met, you can activate Wake-on-LAN via a public address in the TeamViewer options.

To activate TeamViewer Wake-on-LAN via a public address, follow these steps:

1. Start TeamViewer on the computer.
2. Click **Extras | Options** in the main menu.
→ The **TeamViewer options** dialog box will open.
3. Select the **General** category.
4. Under **Network settings | Wake-on-LAN**, click the **Configure...** button.
→ The **Wake-on-LAN** dialog will open.
5. Click the **Public address** option button.
6. In the **Address** field, enter the fixed IP address or DNS name of the computer.
7. In the **Port** field, enter the UDP port via which the computer can be reached (*see section 6.1, page 11*).
8. Click the **OK** button.
9. The computer can now be wakened via its public address and TeamViewer.

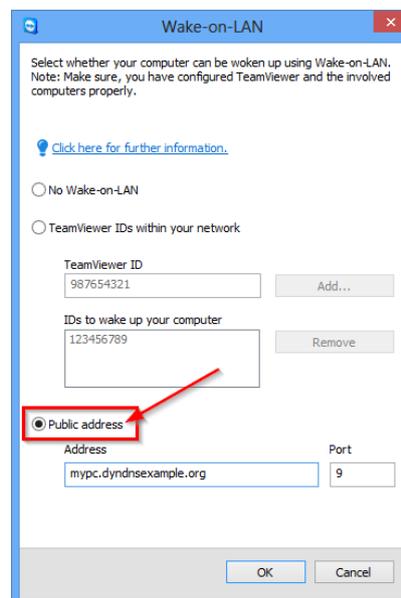

Activating Wake-on-LAN using a public address.

5 Wake up the computer

If the computer meets the requirements described in section 1 and is set up as described in section 2 or 3 and 4, you can wake it up with another device.


Attention: Testing the function prior to usage is expressly recommended. This will prevent problems in case of an emergency.



Note: To wake up a computer, you can use TeamViewer 9 for Windows, Mac OS X, iOS, Windows Phone and the TeamViewer Management Console.

To wake up a computer, follow these steps:

1. Start a device with an existing Internet connection.
2. Open TeamViewer.
3. Log in to your Computers & Contacts list with your TeamViewer account. The device to be wakened must be linked to the TeamViewer account (*see section 4, page 7*).
4. Select the offline computer that you want to wake up from the Computers & Contacts list.
5. In the context menu (right click), click the **Wake up** button.
6. The computer is wakened and appears as online in your Computers & Contacts list.

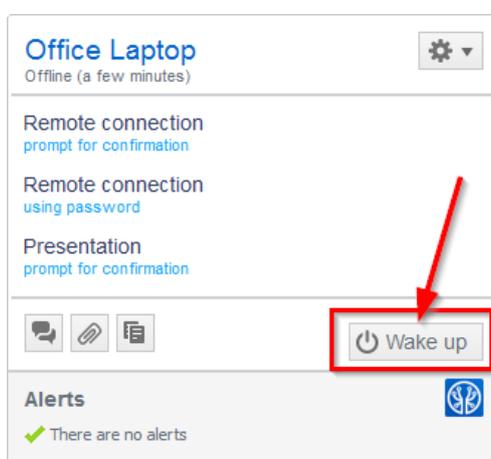

Wake up the computer.

6 Appendix

6.1 Configure the router

The router only needs to be configured if you have chosen the **Public address** option. If you have chosen the option **TeamViewer IDs within your network**, you can skip this section.

Configuring the router depends on the device used and the firmware installed on it. Not all types of devices support the necessary configuration.

Support of Wake-on-LAN via a router's public address requires port forwarding to be set up. Depending on the router used, only some of the following alternative configuration possibilities may be supported.

Note: In order to configure the router, please refer to the manufacturer's manual if necessary.



6.1.1 Set up port forwarding to the broadcast address of the local network

In order to be able to wake up all computers in the local network, set up port forwarding as described in the router manual from an incoming UDP port (e.g. 9) to the broadcast address of the local network (this often ends in ".255"). This configuration makes it possible to wake up all computers in the router's local network that have been configured according to the directions mentioned above.

Example: If the local network is configured with 192.168.1.0 and the subnet mask 255.255.255.0, then port forwarding must be configured from UDP port 9 to 192.168.1.255:9. Sometimes routers do not allow a broadcast address ending in ".255" as the port forwarding destination. This problem can sometimes be avoided by selecting a smaller subnet mask for the local network, such as 255.255.255.127.

6.1.2 Set up port forwarding to a certain computer

In order to be able to wake up a certain computer in the local network, set up port forwarding as described in the router manual from an incoming UDP port (e.g. 9) to the local IP address of the computer to be wakened. It must also be ensured that your router can address the appropriate computer, even when this computer is turned off. In order to do so, a static ARP entry must be saved on the router (see instructions for the router) showing the IP address of the computer to be wakened on the MAC address of this computer. Some routers generate appropriate static ARP entries if a fixed IP address is reserved for this computer (no DHCP). In some cases, an appropriate configuration of the static ARP entries cannot be achieved via the router's configuration menu. The ARP entries can then be configured via Telnet or SSH.